

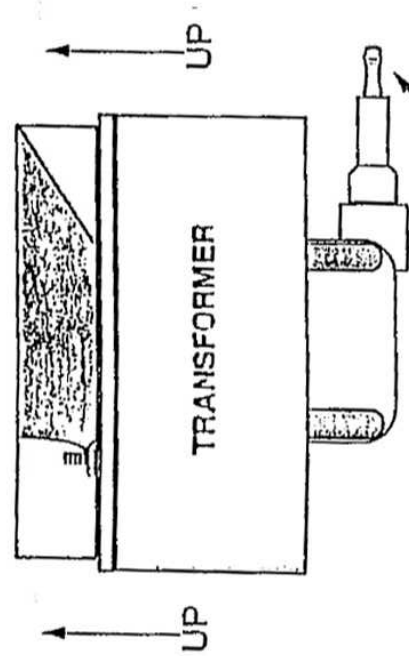


SUPERMAG® II, III, AND IV SPRINTMAG® AND SPRINTMAG® II MAGNETO

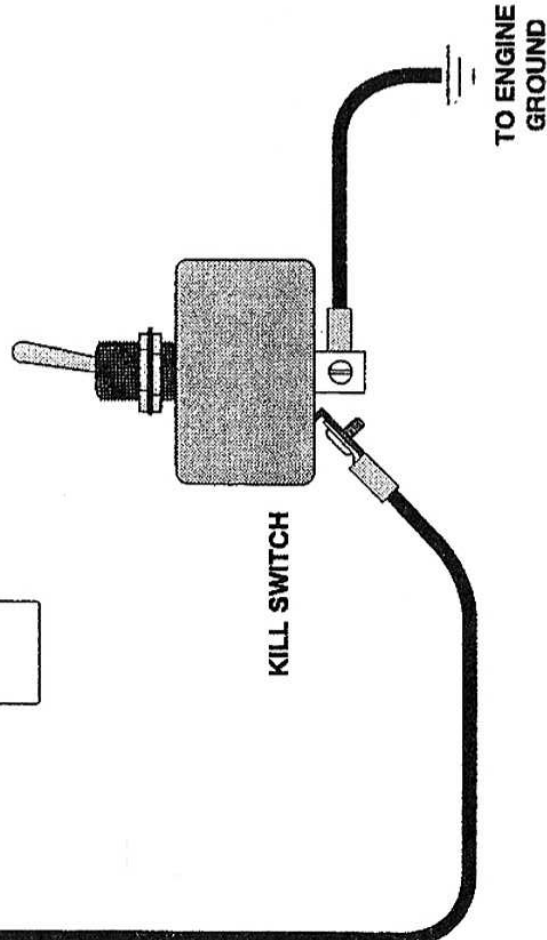

TO PREVENT INTERNAL DAMAGE TO TRANSFORMERS, THE TRANSFORMER MUST BE MOUNTED WITH THE HIGH VOLTAGE TERMINAL COMING FROM THE BOTTOM AND POSITIONED SUCH THAT IT DOES NOT COME CLOSER THAN 2.5" FROM THE NEAREST METALLIC SURFACE.

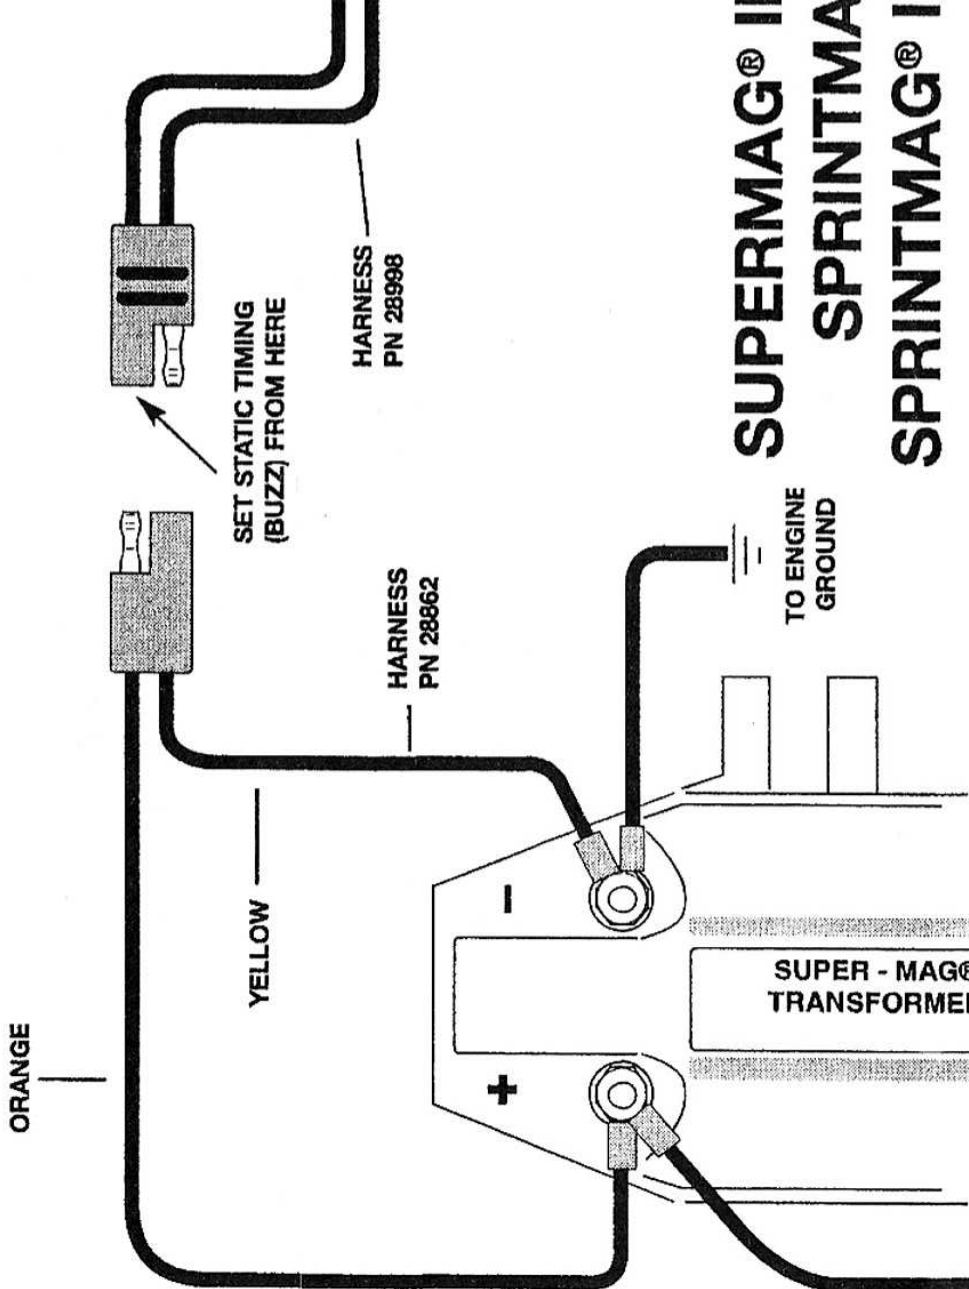

ORANGE

YELLOW

HARNESS
PN 28862

HARNESS
PN 28998

SET STATIC TIMING
(BUZZ) FROM HERE

TO ENGINE
GROUND

SUPER - MAG®
TRANSFORMER

KILL SWITCH

TO ENGINE
GROUND

TRANSFORMER

UP

UP